




Footbox

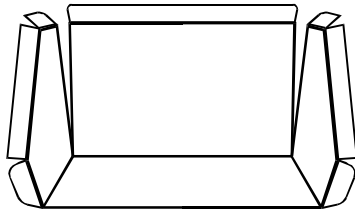


1. Remove the padded cover from the footbox.

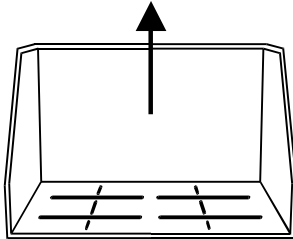

2. Attach the footbox to the footrest plates.

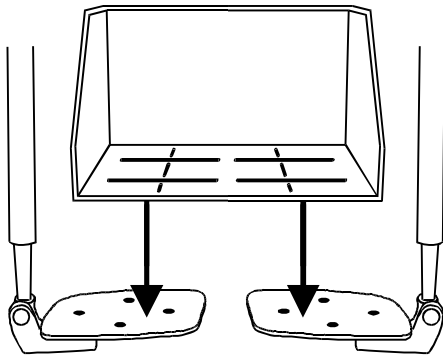

3. Replace the padded cover over the footbox.

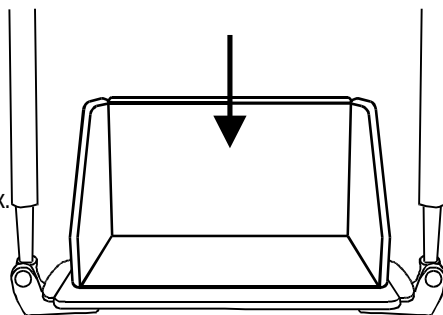

08836



9450 W Laraway Rd • Frankfort, IL 60423
Customer 800-843-7234 • Fax 888-479-1515
www.Therafin.com • info@Therafin.com